

# DIGITAL THERMOMETER WA 135

## SPECIFICATIONS:

- \* 3-piece display
- \* C / F option
- \* Min / max memory
- \* Indoor / outdoor temperature
- \* Month, date, day, time in hours and seconds.
- \* Battery: 1 pc. AA
- \* Temperature scale: -20 ~ +50 deg.C deg.C
- \* Tolerance: + / -1 gr.C.

## Functions:

**TIME:** switches between time and date / month. Hold the button for 2 seconds and setting time, date, etc. is now possible to set.

**MIN / MAX:** show respectively the highest and lowest temperature when the button is pressed. Hold the button for 2 seconds and min / max reset.

**C / F:** switch between Celsius and Fahrenheit.

**UP:** used for setting the time, pressure and counted. Switch from second to day.

## START:

### Timing:

When batteries are installed, the LCD display shows at 12.00 PM, as well as indoor and outdoor temperature in Celsius. Start by setting the time, hold the TIME key for 2 seconds select between 12/24 hour clock, use the UP button to change settings. When an option is selected, confirmed with the TIME button and the guides will automatically advance to the next setting. In this way you set the clock, day, month and year. If you do not press any buttons for 1 minute the thermometer will return to normal view. Pressing the TIME button outside the setting mode, will switch between clock and date / month. Pressing the UP button outside the setting mode will switch between second and day.

### Memory highest and lowest temperature:

Press MAX / MIN button and the highest temperature inside and out will be displayed. Press again and the lowest temperature inside and out will be displayed. Press again or wait 8 seconds and the display returns to the current indoor and outdoor temperature. Do you want to delete / reset the highest and lowest temperature observed MAX / MIN button for 2 seconds.

## VIEWING THE MIN / MAX TEMPERATURE:

Press MIN / MAX to display the highest temperature indoors and outdoors. Press the button again and display the lowest temperature indoors and outdoors. Press again and the display returns to the here and now temperature. Do you wish to delete min / max temperatures hold button for 3 seconds.

## ALARM SETTING:

Press ALE to activate the alarm function. (ALE ON appears in the display) Press again and the alarm function is turned off. (ALE OFF displayed) If the button is not affected in 2 seconds the display returns to the here and now temperature. Hold the button for 3 seconds and you can now set the alarm for outdoor temperature. Use the C / F to set the desired temperature. When the desired temperature is set and the temperature in the top line is higher than the bottom line and the outdoor temperature falls within the preset temperature alarm will go off. Conversely, if the temperature in the bottom line is higher than the top line and the outdoor temperature reaches the preset temperature alarm will go off.

Press ALE to return for inside / outside door temperature. When the alarm goes off, it sounds for 5 seconds every minute until the temperature falls within the preset tolerance or press the EFA button.