OJS047-800B

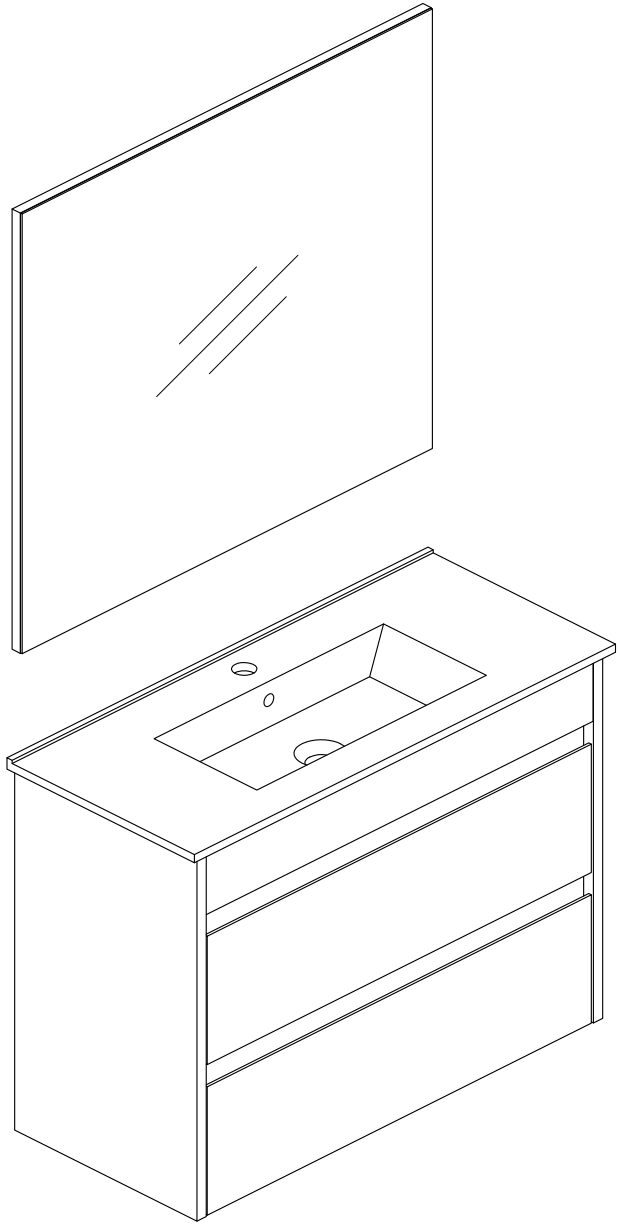

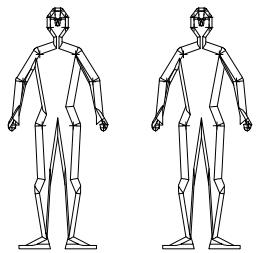

Helper needed for some tasks

To install your product, you will need
(Items not supplied)

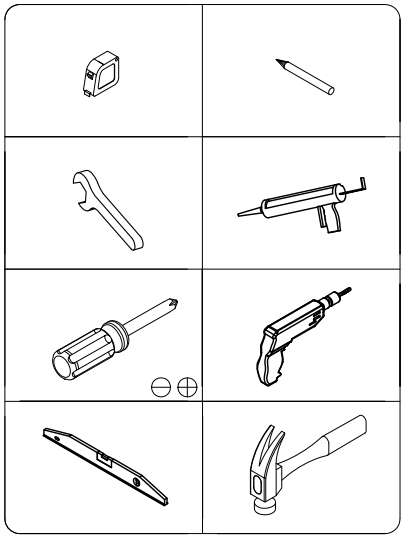

OJS047-800B

1

Always use on firm level ground

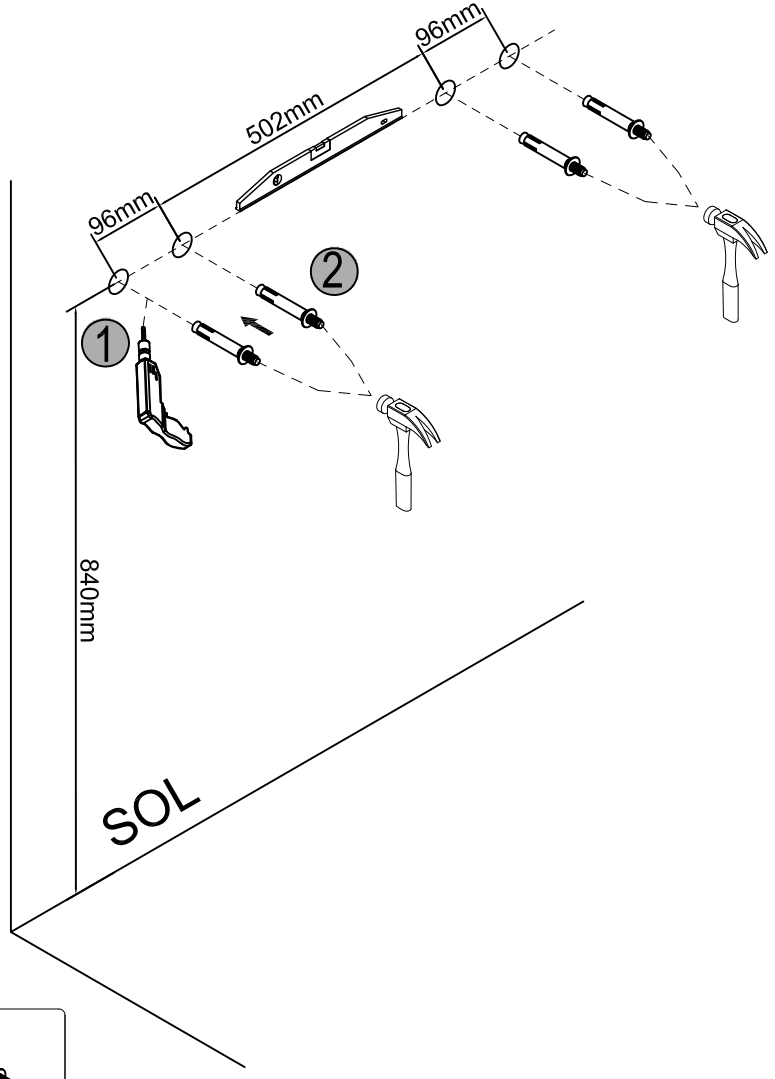

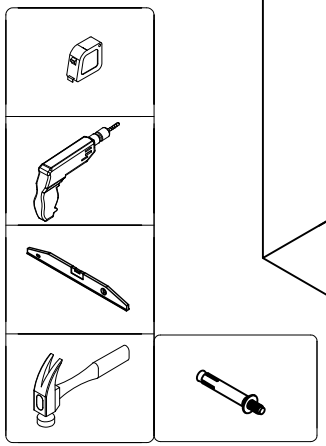

2

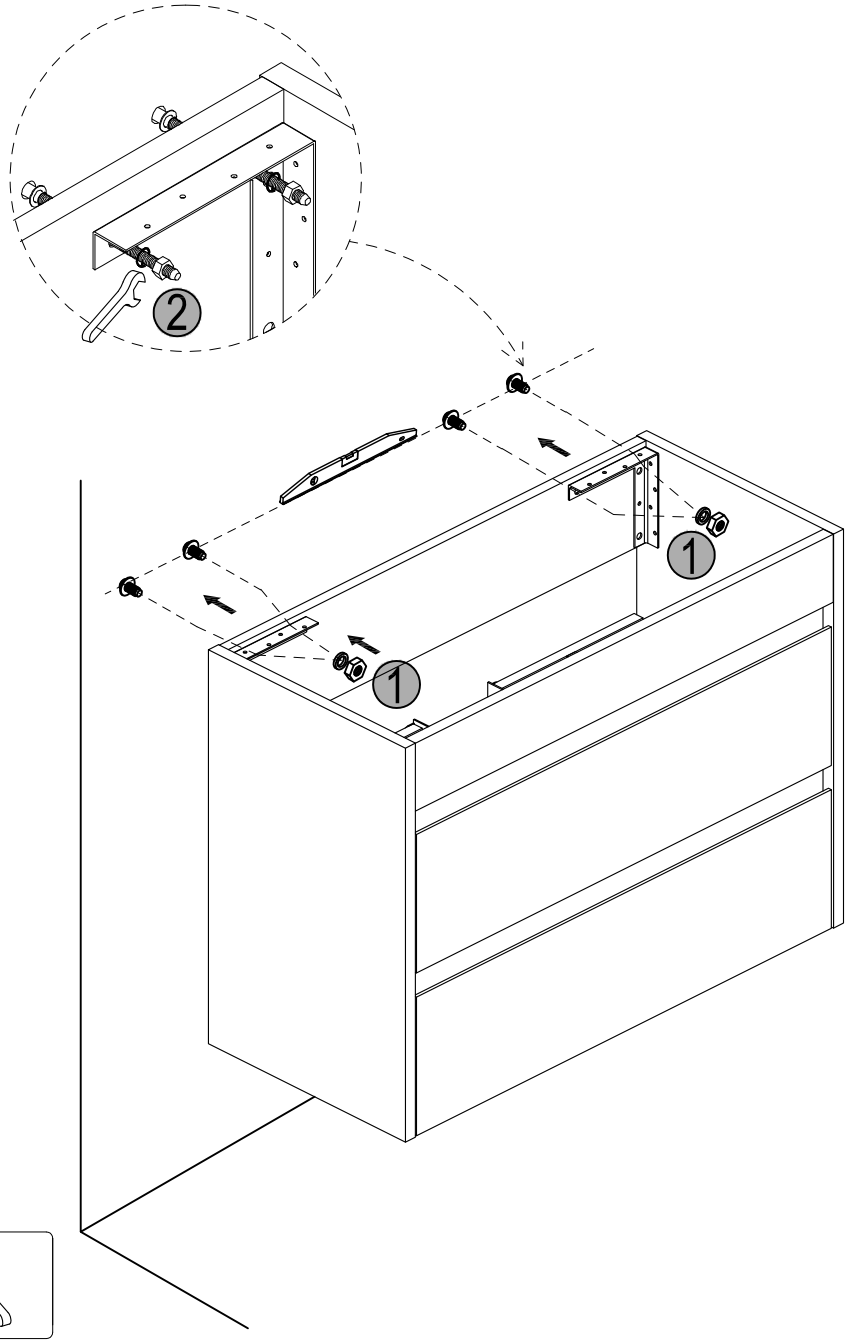



OJS047-800B

3

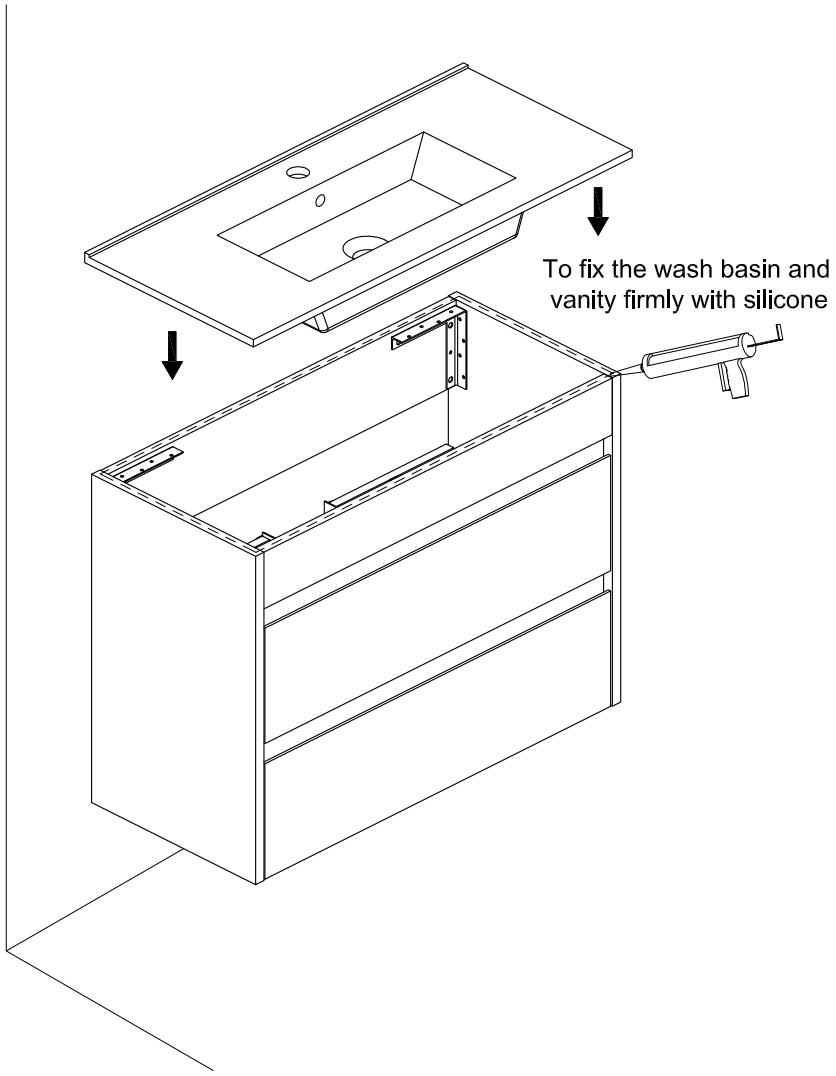



4

Always use on firm level ground

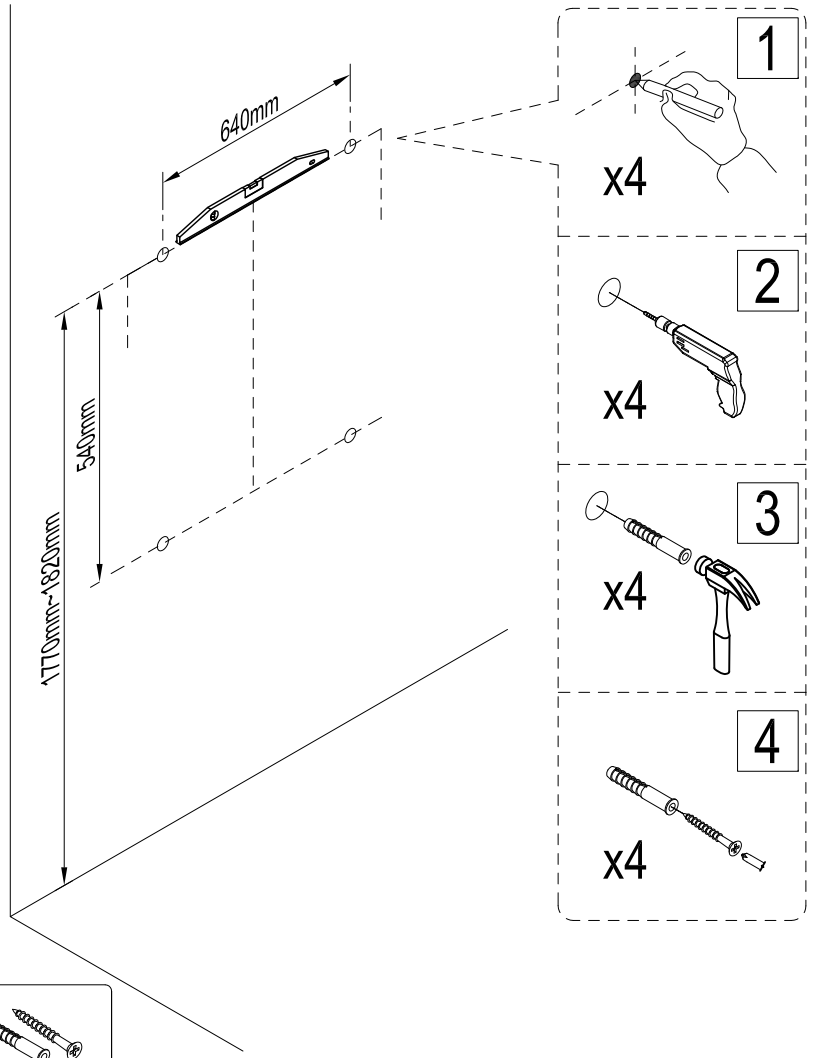

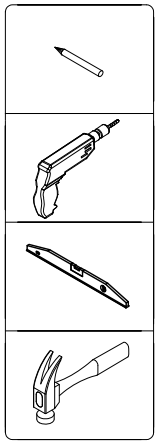



OJS047-800B

5

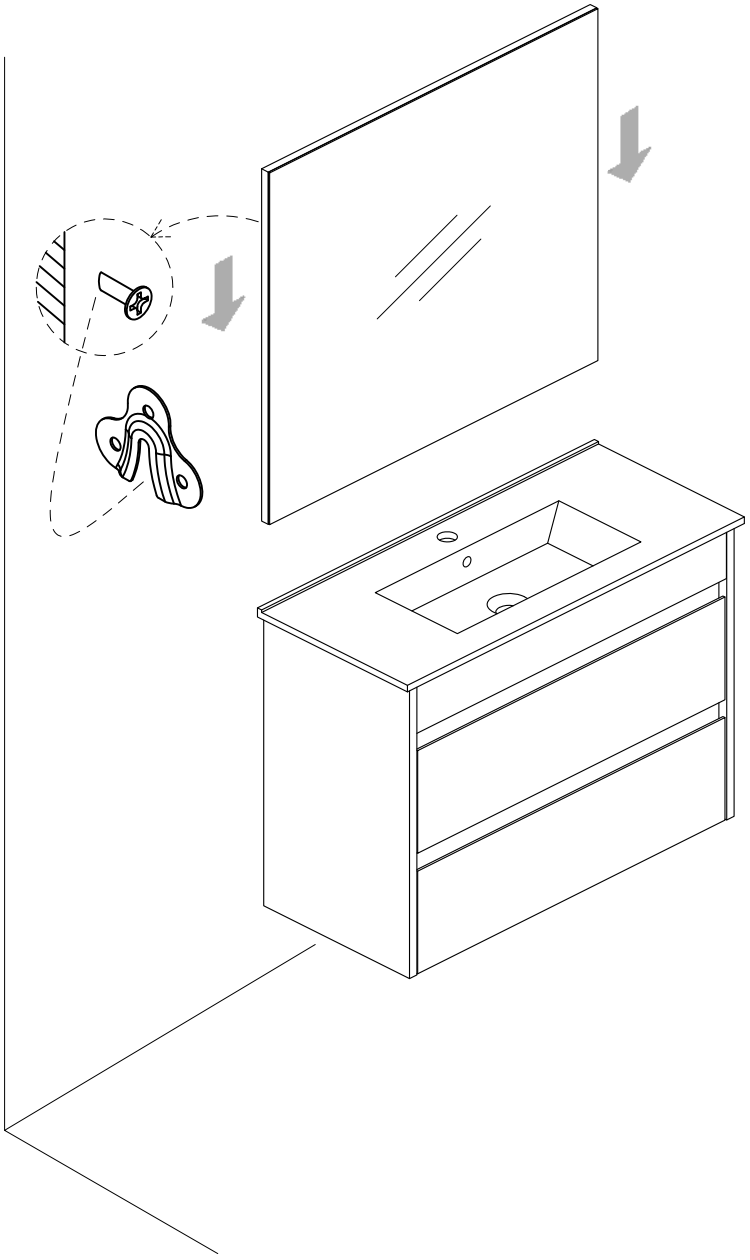
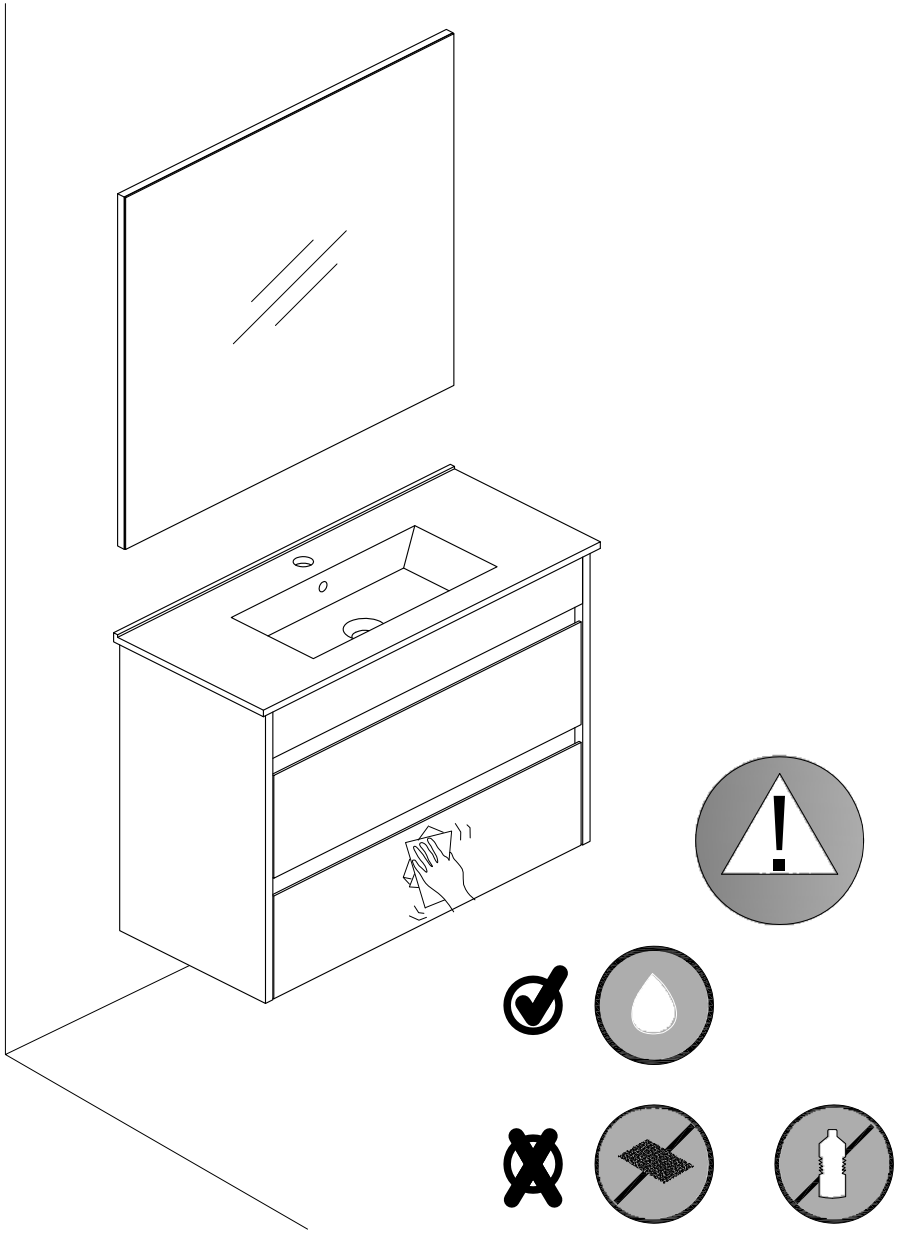
6