

# Installation instructions

## UNIKA ACOUSTIC PANELS




The UNIKA series is suitable for wet rooms / bathrooms with a relative humidity below 55%. The ends must be sealed with a clear varnish when installing in all types of wet rooms





You will need a glue gun, FibroTech assembly adhesive, a spirit level, screwdriver, pencil and FibroTech black screws. We suggest you use cotton gloves when installing your product.

**Note:** Because of the amount of wood in the acoustic panels, they may smell a bit of wood. Therefore we recommend they are acclimatized before installation.

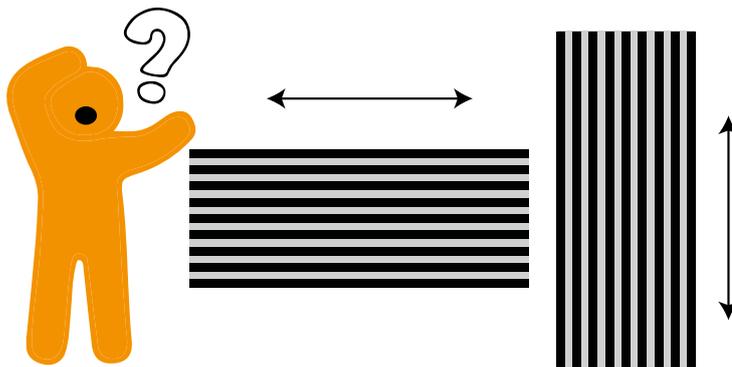

Decide in which direction you wish to install your acoustic panels. You can shorten them by using a fine-toothed saw on the back.


Apply glue on the back of the panels.

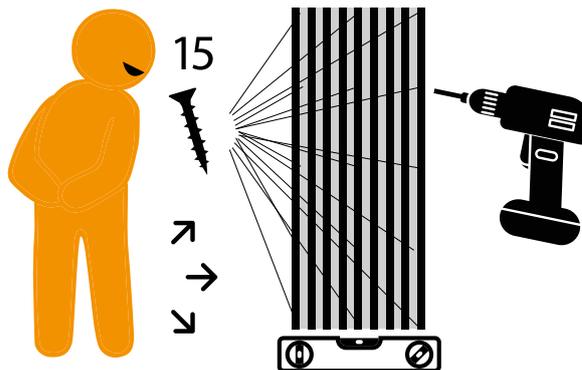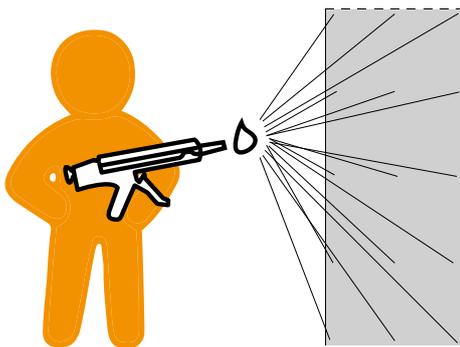

Use screws to install the acoustic panels on a wall or ceiling. You need 15 screws for each panel.

In case of shuttering, distance should be 600 mm.

Remember to hold onto wadding or solder.

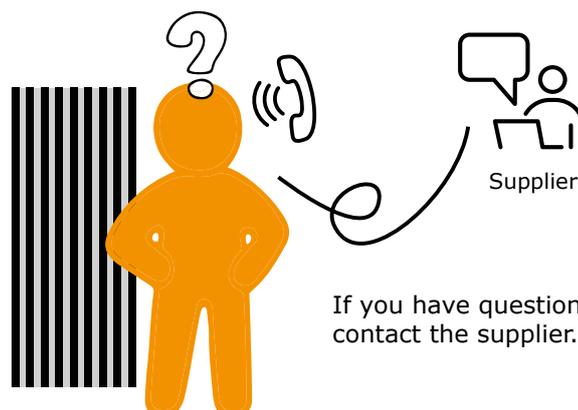

If you have questions, contact the supplier.



Importer:  
TreeTops A/S

The mark of responsible forestry